

Classroom Shared Elmo



Directions for Connection and Use

There are a couple options for connection

1. USB Cable (*Quick and easy hook up but the quality of the image isn't as good as using Option 2*)
2. RGB/VGA Cable (*Better image quality*)

Option 1 – Use the USB cable

- Connect the power cord into the back of the Elmo and into electrical outlet
- Plug the micro USB cable end into the back of the Elmo and the other end of the USB cable into a computer USB port.
(Drivers install automatically and will take a few minutes. You may notice something in the bottom right side of your screen 'installing drivers'. It takes a minute or two for this to go through the entire process). When finished, you will be able to use the Elmo.)
- Power on the Elmo, pressing the power button (orange light when off, blue light when on).
- Open the BrightLinks Interactive Tool Bar (*Interactive Tools version 2.0*)
- In the Interactive Mode tool bar, click the **Document Camera** button

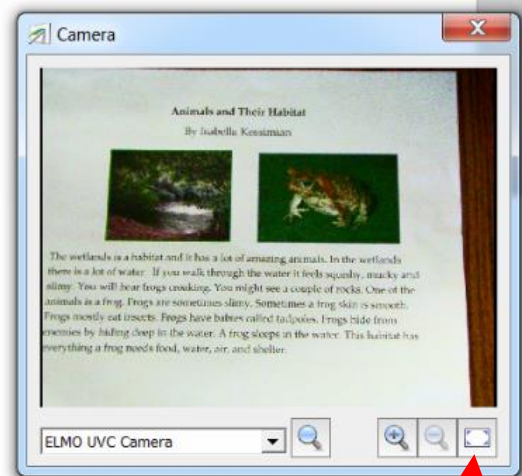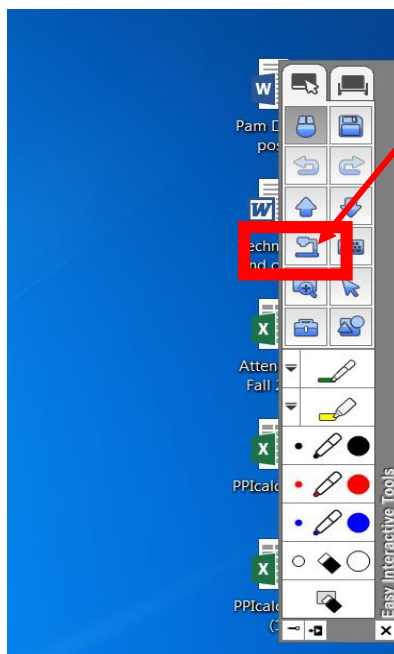


The camera will open and display, click the button in the lower right corner for **full screen view**

Option 2 – RGB/VGA connection (*Better image quality*)

Disconnect the RGB cable from the back of the splitter (*it's the cable that connects to the data jack for your BrightLinks and has the skinny cable for the audio attached to it*).

Connect the RGB cable into **RGB Out** port on the back of the Elmo.

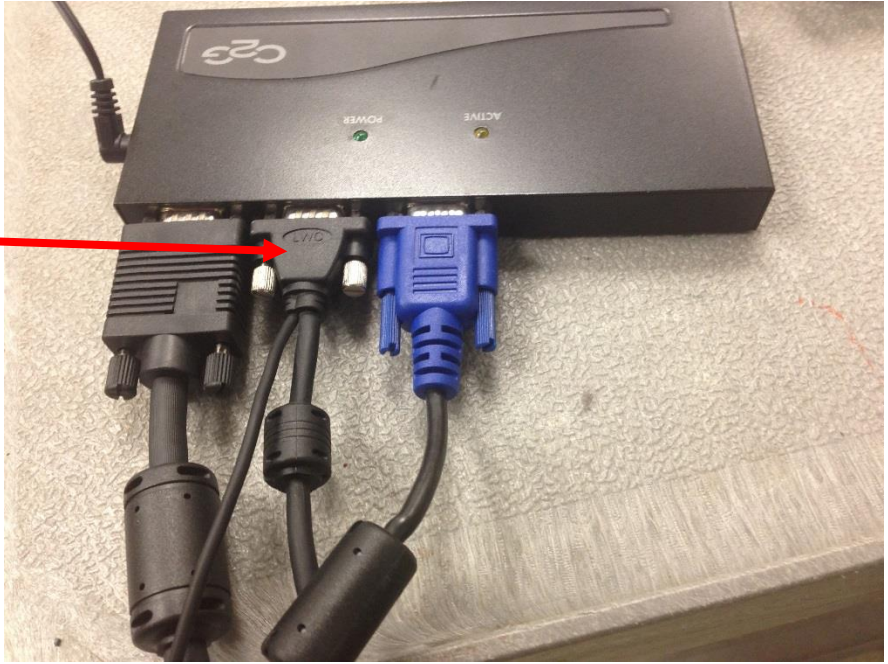

- Power on the Elmo, pressing the power button (orange light when off, blue light when on).
- Open the BrightLinks Interactive Tool Bar (*Interactive Tools version 2.0*)
- In the Interactive Mode tool bar, click the Document Camera button

